

FIG. 1

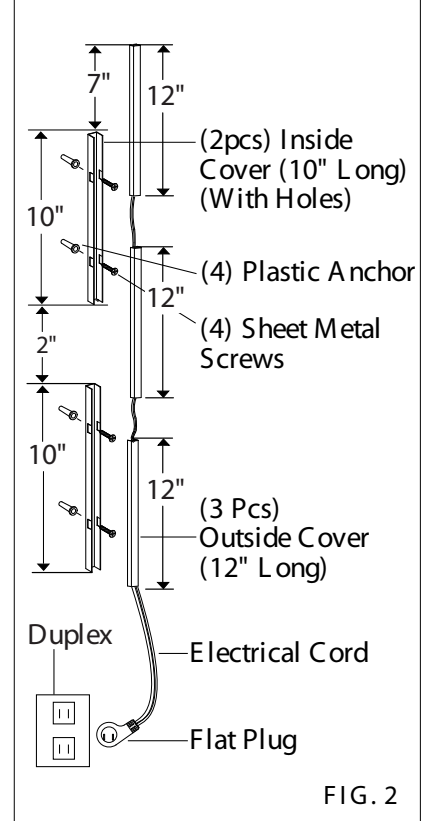


FIG. 2

MURRAY FEISS

ASSEMBLY INSTRUCTIONS FOR MR1065

Carefully unpack and identify all parts before beginning assembly.

1. Install finials by screwing onto top and bottom of mirror frame
2. Lay frame, with screw holes side facing up, on a non-abrasive surface.
3. Gently lay glass mirror, with metal mirror brackets side facing up, on top of frame. Holes in mirror brackets must align with holes in frame.
4. Secure glass mirror onto frame with 2 screws and lock washers at top and another 2 at bottom.
5. Measure distance between center points of 2 slots on top metal mirror bracket. Install two picture frame hangers (not included) into wall at corresponding position.

Note: Use a level to insure mounting position is horizontal. Make certain the picture hangers are securely fastened onto wall to adequately support the weight of the mirror. If not certain, consult a qualified technician.

6. Carefully hang mirror onto wall.
7. Electric cord cover installation (kit included): See Fig. 3 A. Using a pencil lightly draw a straight vertical line on wall below center of mirror