


## Instructions for electrician STEPS 2 - 18


**WARNING:** THIS LUMINAIRE MUST BE MOUNTED OR SUPPORTED INDEPENDENTLY OF AN OUTLET BOX.

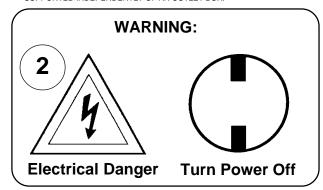

All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.

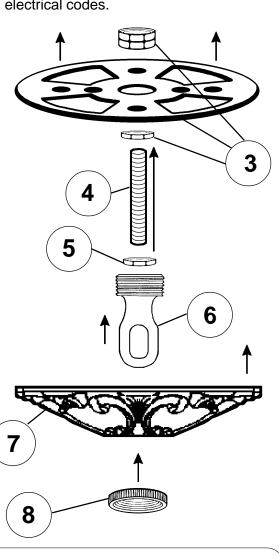

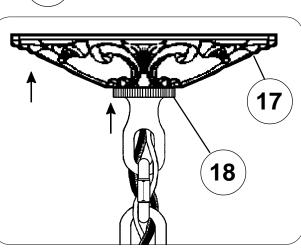

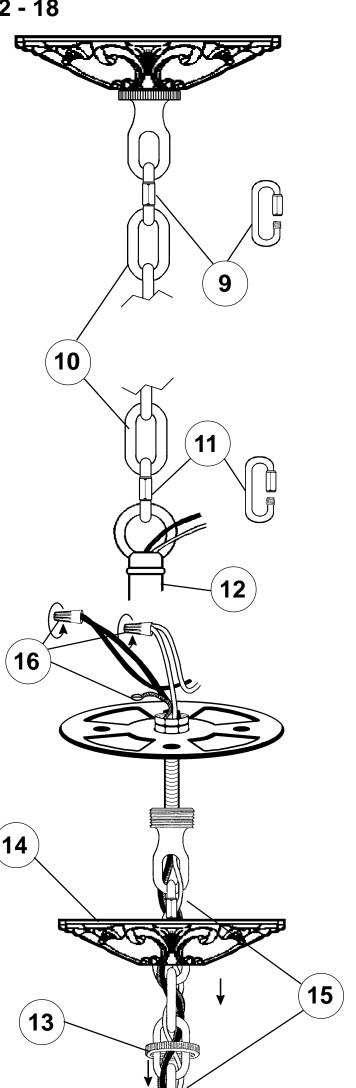



**TRIM DIAGRAM** 

(Finish Option) (Trim Option)



This design is the proprietary trade dress/trademark of schonbek worldwide lighting inc.

Body Length: 48" Hanging Weight: 96 lbs.

## **SCHONBEK**®

See diagram on back page Follow steps in exact order Save this trim diagram for future reference



## **IMPORTANT**


Person who opens carton should record the following information for future service.


CODE # \_\_\_\_\_ Four-digit number on outside of carton.

PACKER # \_\_\_\_\_ See crystal package label.

ORDER # \_\_\_\_\_ See crystal package label.

## Instructions for crystal trimming

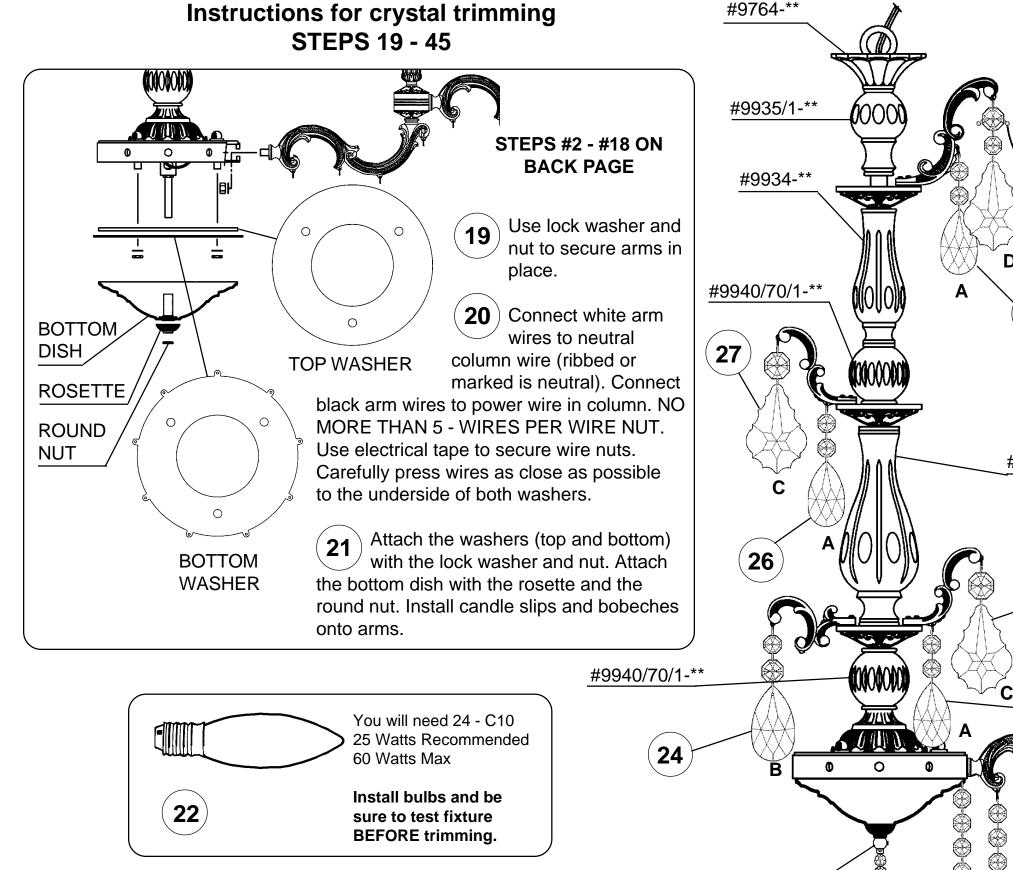

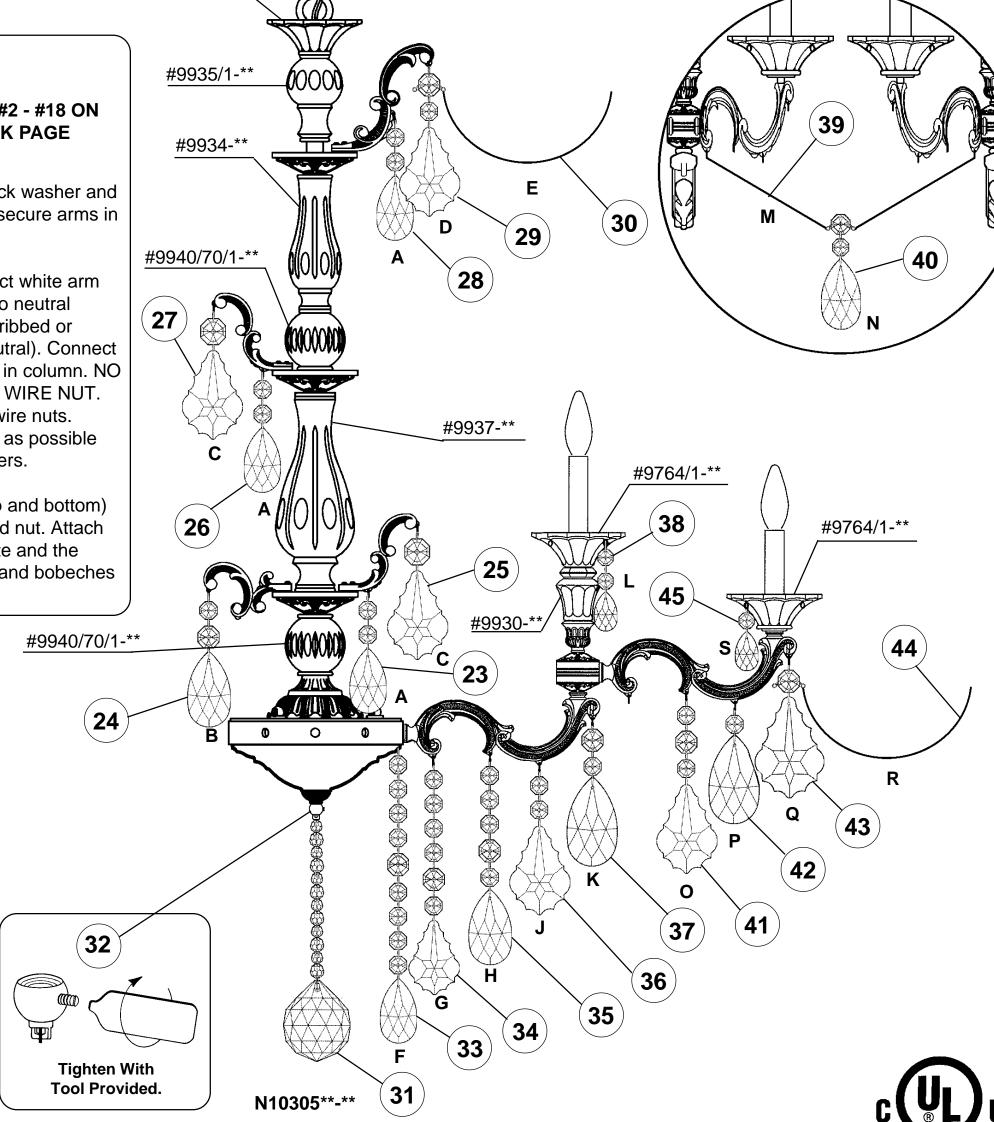

**HANG** 

**CRYSTAL** 

**WITH FLAT** 

SIDE TO

**FRONT**