




# SCHONBEK®

## NOVIELLE NV3906- \_\_\_\_ A TRIM DIAGRAM

(Finish Option)

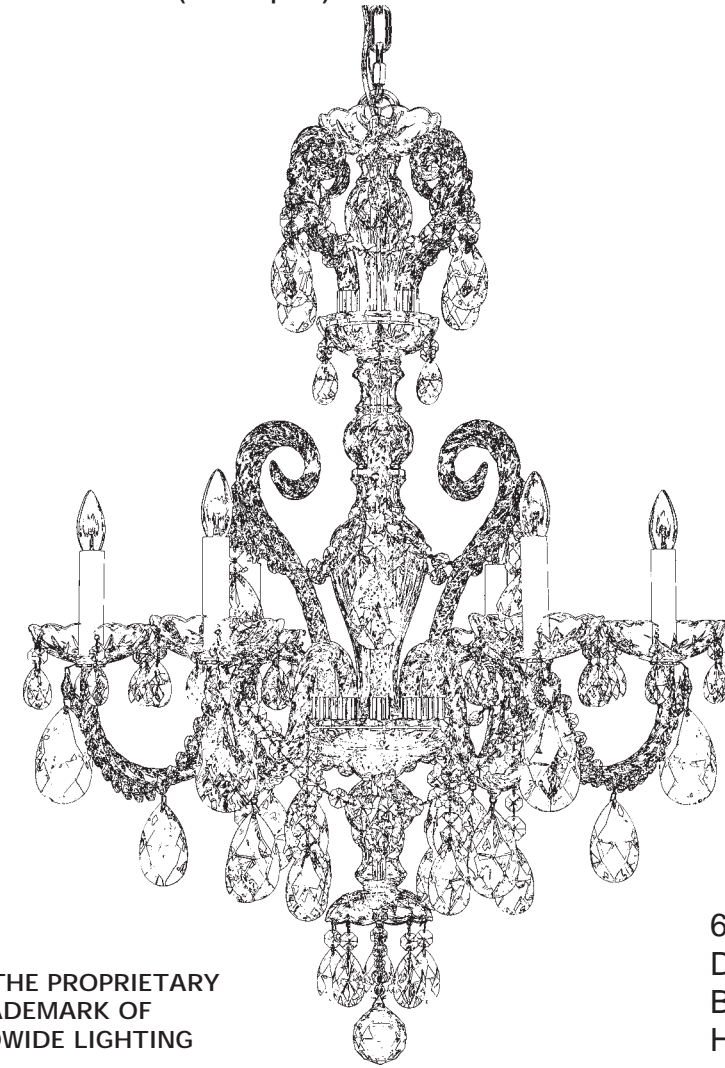

**T**HIS DESIGN IS THE PROPRIETARY TRADE DRESS/TRADEMARK OF SCHONBEK WORLDWIDE LIGHTING INC.

6 Lights  
Diameter: 25"  
Body Length: 36"  
Hanging Weight: 22lbs.



# SCHONBEK®



MAX 60 W

110-120 V

**1**

### IMPORTANT

*Person who opens carton should record the following information for future service.*


CODE # \_\_\_\_\_ Four-digit number on outside of carton.

PACKER # \_\_\_\_\_ See crystal package label.

ORDER # \_\_\_\_\_ See crystal package label.

SCHONBEK® is a member of the Swarovski company.

## Instructions for electrician STEPS 2 - 7

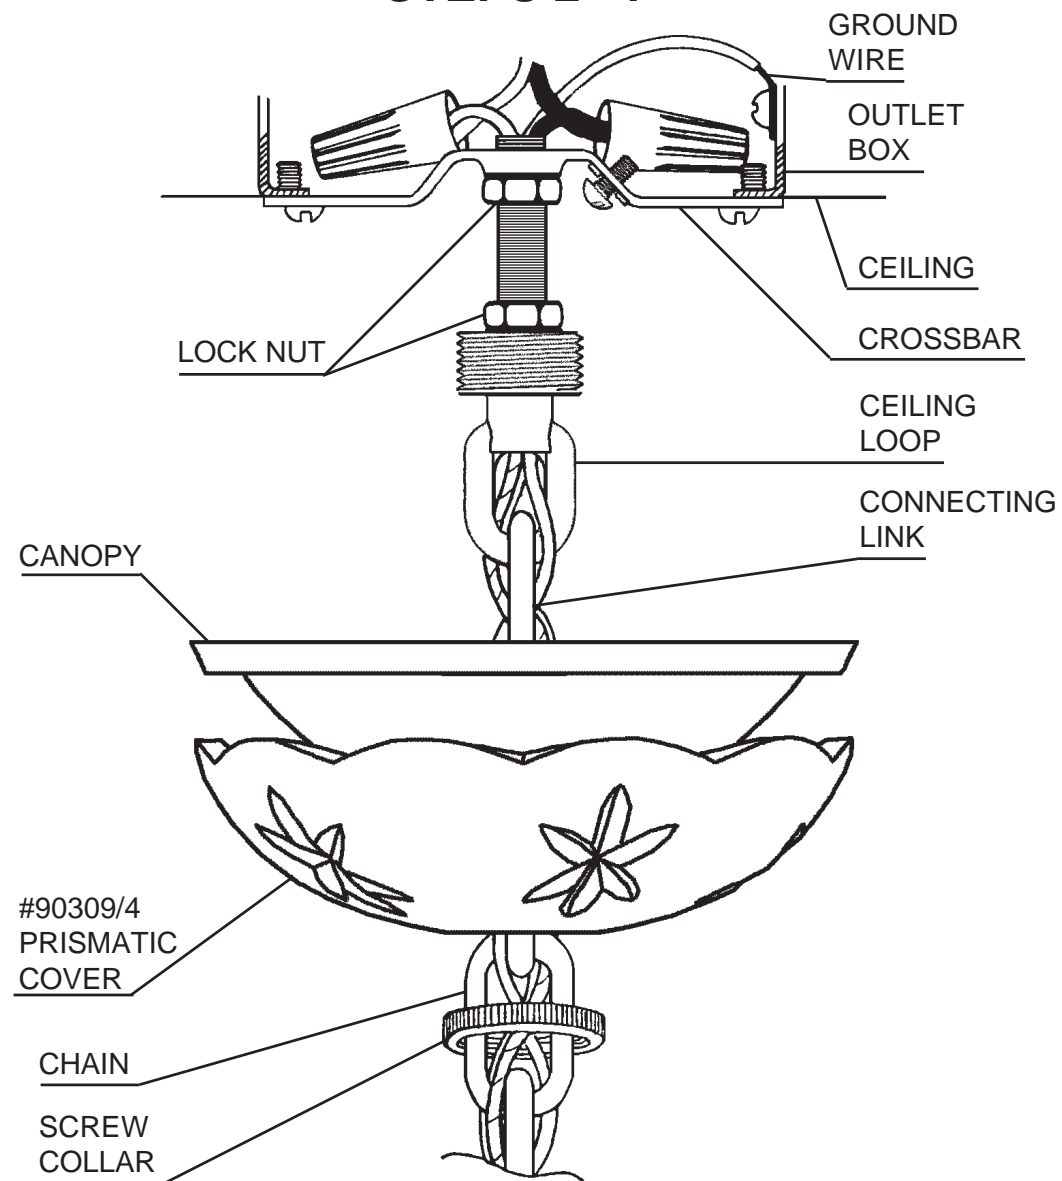

**2** MAKE SURE POWER IS DISCONNECTED!!

**3** Attach crossbar to outlet box.

**4** Slip screw collar, prismatic cover and metal canopy over chain. Determine the suspension length of the fixture and cut chain, if necessary. Use two connecting links to attach chain to chandelier loop and ceiling loop.

**5** Insert stem wire through chain and ceiling loop. Connect wires. Fixture **MUST** be grounded.


**6** Check distance from ceiling to loop to assure canopy assembly will be flush against ceiling.

**7** Attach canopy to ceiling with screw collar.

**NOTES:**


## FRAGILE:

**CAUTION:** Glass parts are fragile. To avoid breakage use care when assembling or cleaning.

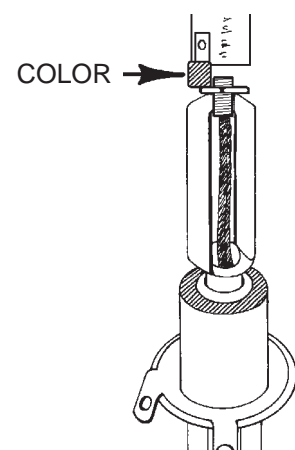


### WHEN ORDERING REPLACEMENT ARM(S):

- \*\* Give arm number from trim diagram
- \*\* Give color code from the arm itself

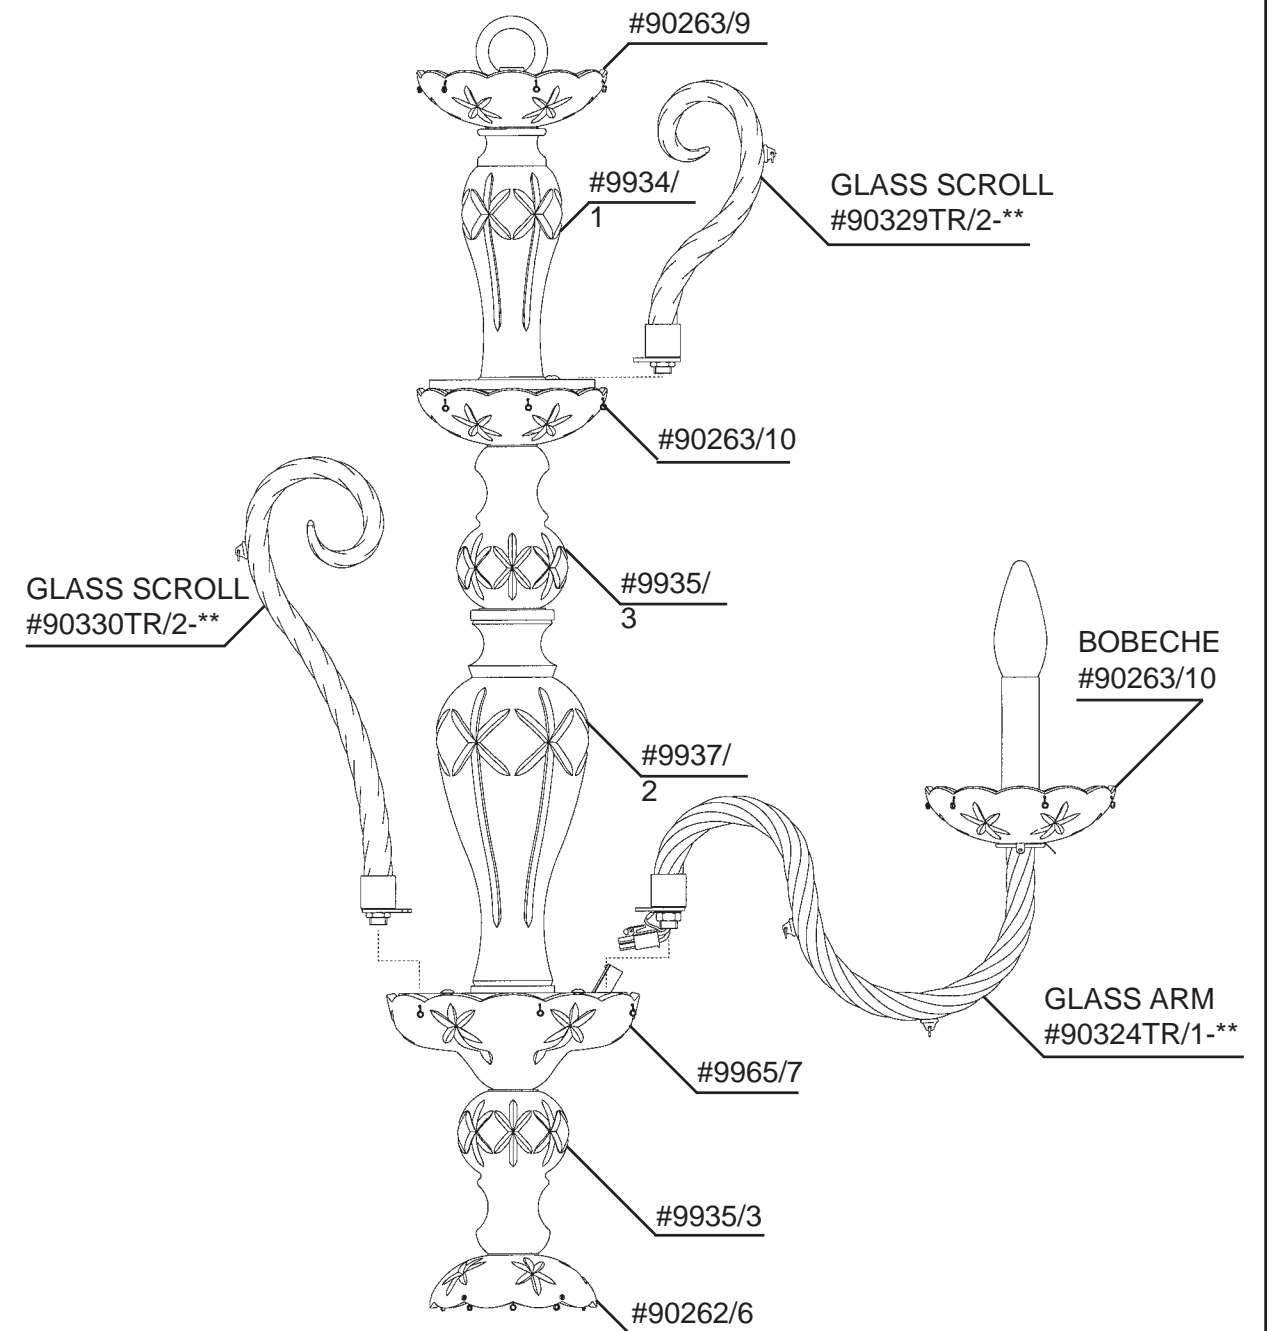


**8** Install small scrolls into top washer and large scrolls into inner hole pattern in bottom washer. Use screw to secure scroll in place.

**9** Connect arm wires to the center column using plug-in connectors. See detailed illustration.




**10** Push wires into hole and attach arm to washer by rotating arm into place. Lock down by tightening screws into flange. See detailed illustration.

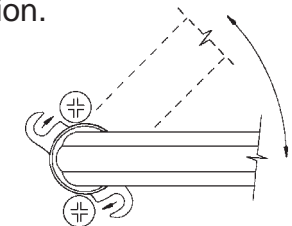

**11** Install bobèches and bulbs. Connect power and test fixture before trimming. If any of the bulbs do NOT light - DISCONNECT POWER. Double check the wire connections.

**Instructions for crystal trimming**  
**STEPS 12 - 27**

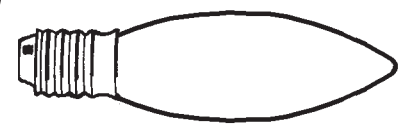

You will need 6 - B10  
 25 Watts Recommended  
 60 Watts Max

**12**

**Install bulbs and be  
 sure to test fixture  
 BEFORE trimming.**

